



Step 1:

Install Wall Connectors and Mullions

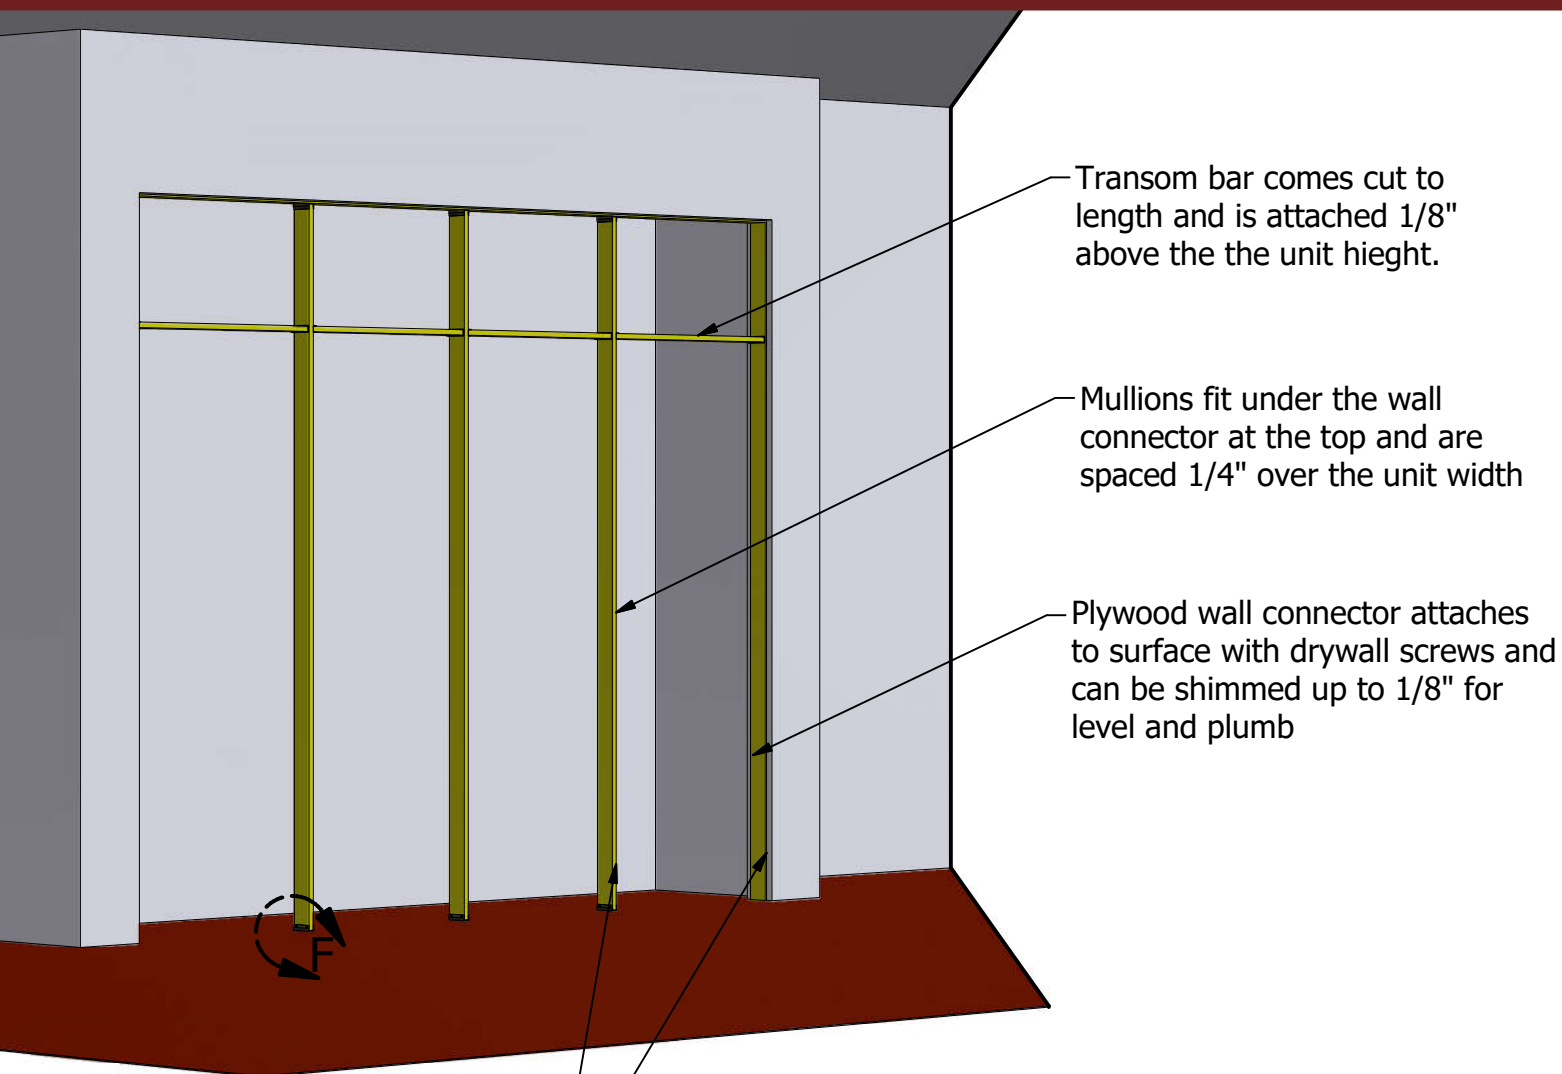

The plywood opening should measure 1/4" over the width of the unit.

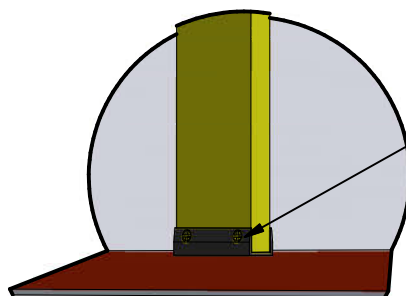

Tips:


- Use of a laser level can help make sure the wall connectors are plumb and aligned across the front edges.
- Solid blocking around perimeter helps secure wall connectors and mullions.



RENAISSANCE
GENUINE SOLID BRONZE

Step 2:

Insert doors & sidelites and fasten

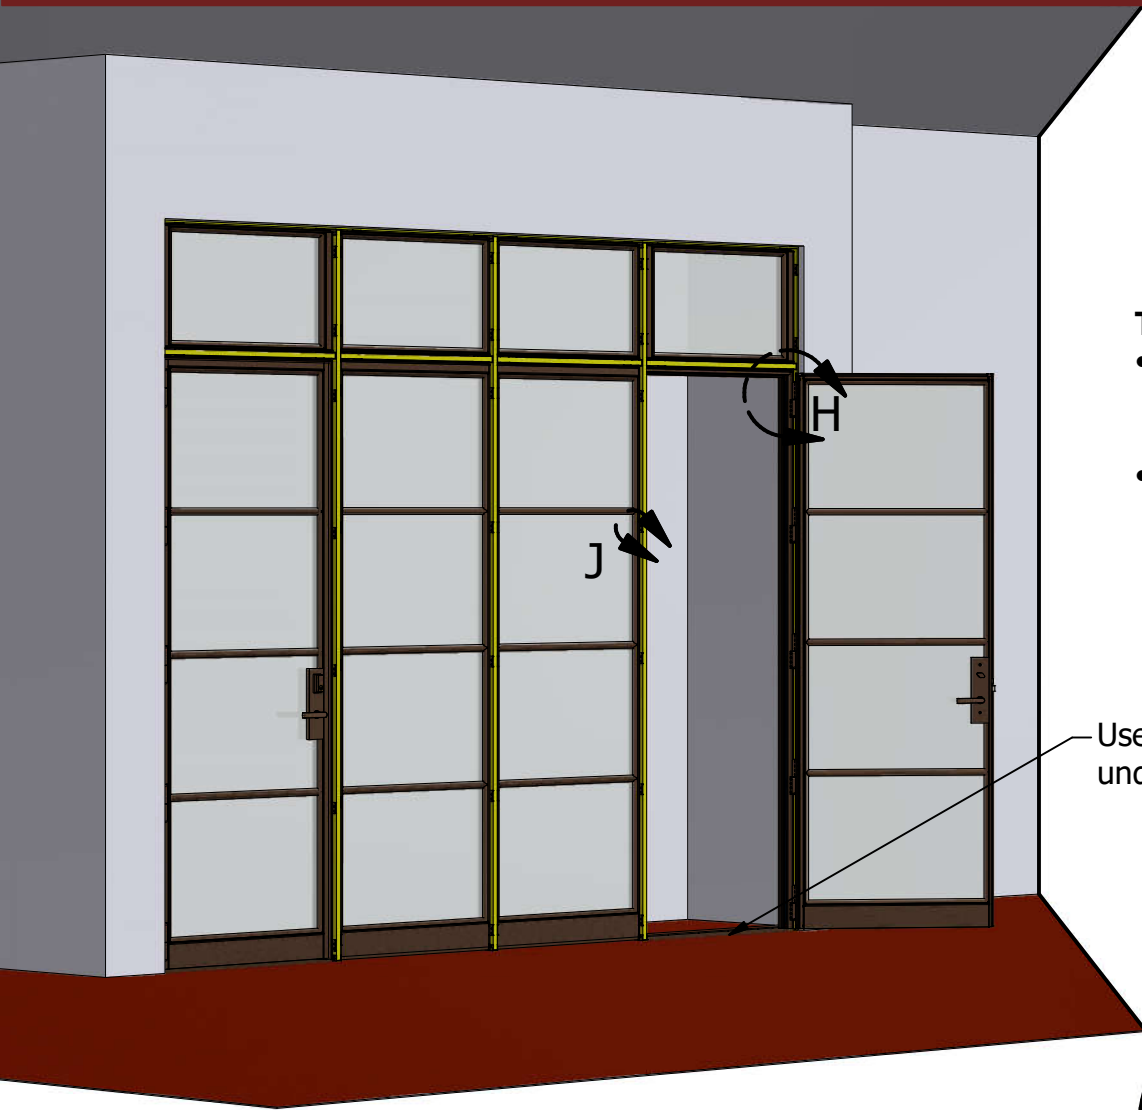


Tips:

- Use #10 x 3/4" screws to fasten mounting tabs to mullions
- Confirm proper door operation before proceeding to next step

Use premium grade sealant under thresholds and sidelites


Place the thrush washers over the hinge pins before lifting on the door

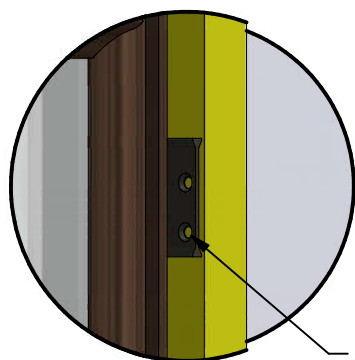

DETAIL J

Anchor the units in place with screws thru the mounting tabs

Replace the top hinge screw on the frame with a long sheetrock screw to keep the door from sagging

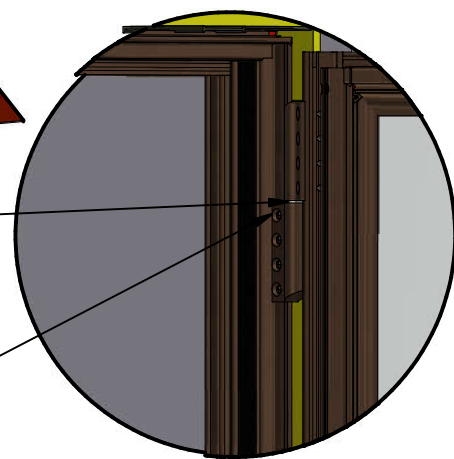

DETAIL H



RENAISSANCE
GENUINE SOLID BRONZE

Step 3:

Install wall connector covers and mullion covers



Transom mullion covers are installed after mullion and wall connector covers

Mullion covers are installed after doors are fully functional.

Wall Connector Trim can be turned either way to cover front edge

Tips:

- Minimally expanding foam can be used to seal around frames once doors are fully functional
- Use a quality sealant to adhere and seal trim in place.



RENAISSANCE
GENUINE SOLID BRONZE