



Weatherstripping Installation Instructions


Angle Frame Double Door

Tools & Materials Needed:

- DOW 995 Black Silicone (manufacturer recommended)
- Plastic razor blade
- Cleaning rags
- Screwdriver
- Replacement weatherstripping (if needed)

Step-by-Step Instructions:

1. Loosen the screws on the astragal (see image reference, if provided).
2. Remove the currently installed weatherstripping.
3. Clean out any black glue from the groove. It does not have to be perfect, but removing most of it is best. A plastic razor blade is recommended to avoid damage.
4. Apply a thin bead of DOW 995 black silicone into the weatherstripping groove.
5. Insert new or existing weatherstripping, ensuring the backing touches the silicone and the brushes face outward.
6. Tighten the astragal screws until secure. Do not pull on the weatherstripping during this step, as it may come loose.
7. Clean any excess silicone that may squeeze out.
8. Leave doors open for 32-72 hours to allow the silicone to fully cure. Do not use the doors during this period, as movement may interfere with the installation.
9. After curing, clean any visible silicone and test to ensure the weatherstripping is secure.

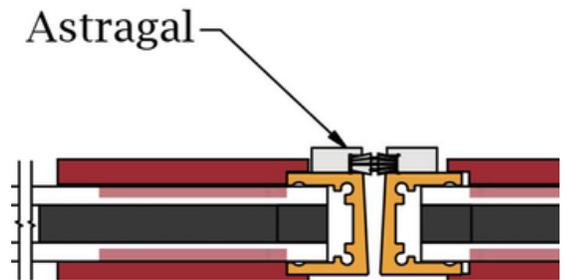

Important Notes:

- Weatherstripping must contact the silicone along the entire vertical length of the door for a reliable seal.
- Astragal screws are short; avoid over-loosening. If a screw falls out, simply reinsert.
- If the astragal is fully removed, reinstall it before applying silicone.
- Use only DOW 995 to maintain warranty coverage. Other silicones may damage bronze, glass, or lock components.

OPTIONAL REPAIR KIT AVAILABLE

Includes:

- Replacement weatherstripping
- DOW 995 silicone
- Plastic razor blades
- Cleaning rags

To order, contact us at amber@rgsbronze.com.

WWW.RGSBRONZE.COM

(210) 832-8040

8902 Broadway, San Antonio, TX 78217

support@rgsbronze.com